



BAVARIAN AUTOSPORT

Sunroof Wind Deflector Installation Instructions


IMPORTANT: Before starting, read all instructions and verify all parts listed are on hand and kit is complete.

All Models BMW

Except 3 Series 92 on


PARTS INCLUDED IN KIT:

- (1) Wind Deflector
- (1) Rubber Seal Strip
- (2) Mounting Brackets
- (2) Bracket to Deflector Screw
- (2) Plastic Nuts

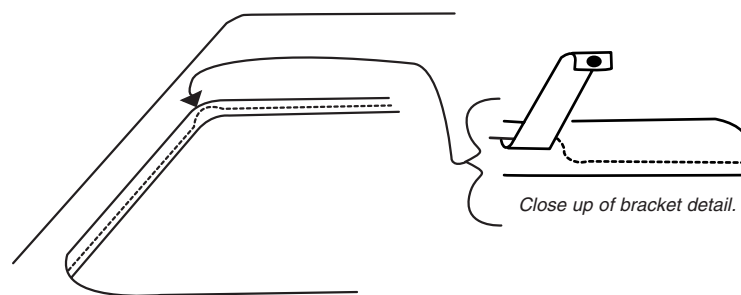


PROCEDURE:


1. Insert one mounting bracket into the seam between the roof panel and the sunroof frame on both the right and left side of the car. The seam between the roof panel and the sunroof frame is sealed with caulking. Look closely to locate the caulking and the seam. Press the mounting bracket into the caulking between the panels with the flat side of a screwdriver. Position the bracket straight up and down and, if necessary, adjust the bracket with pliers and reinstall. Always use care when applying pressure so the screwdriver does not slip and scratch the body work.
2. Place the rubber seal strip around the base of the deflector. A few inches will be left over and should be trimmed with a utility knife before installation.

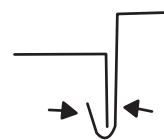

Pinch bracket with pliers so that it is flush with the edge of the roof opening.

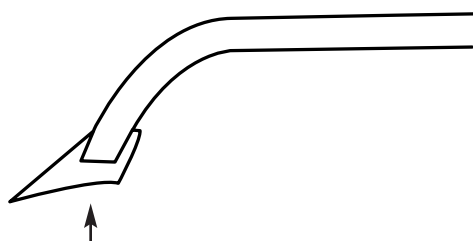

3. Line up screw holes on the deflector with mounting brackets. Insert screws from the top and fasten with plastic nuts. It may be necessary to push down on the deflector to engage the nut with the screw. You will need to apply pressure enough to create a good seal between the roof and the deflector. Use care when tightening the screws so that the screwdriver does not slip and scratch the deflector or the paint.

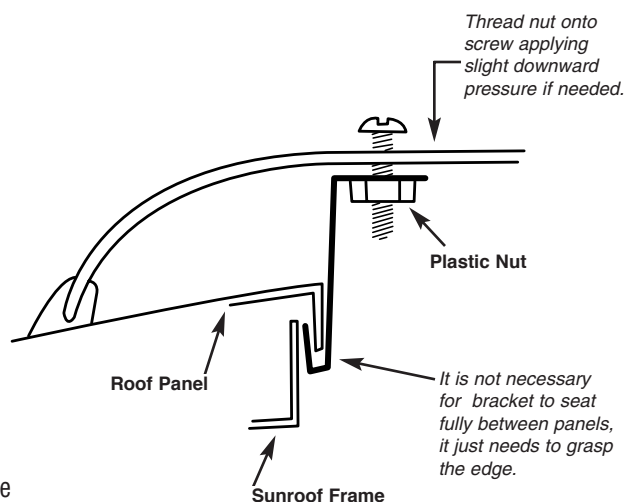

BAVARIAN[®]
autosport

275 Constitution Avenue, Portsmouth, NH 03801

• 603.427.2002

Call Toll Free: **1.800.535.2002**

• Fax 800.507.2002

• www.bavauto.com